
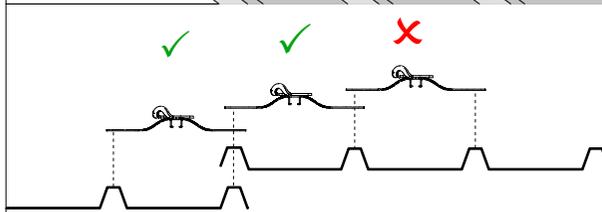


Rapid top mount anchor quick install guide - screw-fix roofs



OPTION 1 - RIVETS ONLY

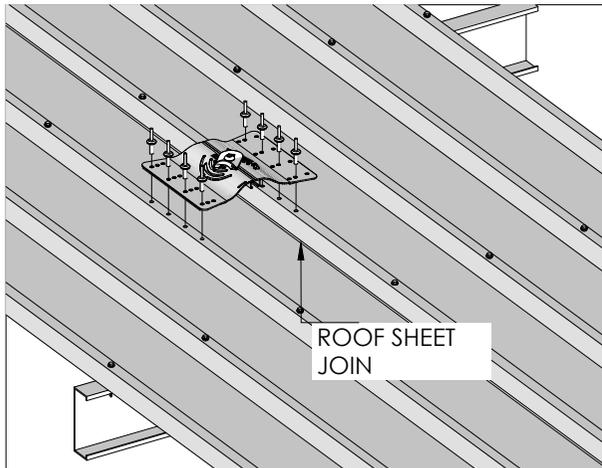

OPTION 1

- 8 x 8mm Rivets
- Min 3 purlins
- Must be fixed over 2 roof sheets



OPTION 2 - RIVETS ONLY

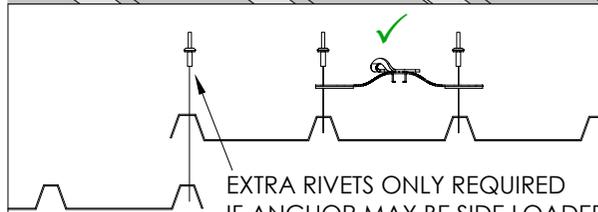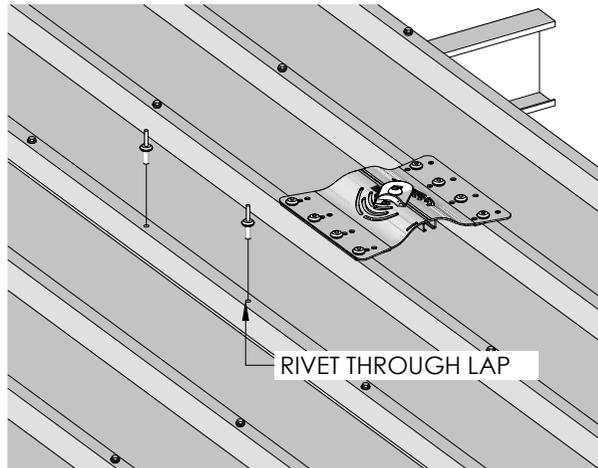

OPTION 3

- 8 x 8mm rivets
- Min 3 purlins
- Additional rivet required on overlap if anchor loaded at 90 deg to roof sheet

OPTION 3 - RIVETS AND SCREWS

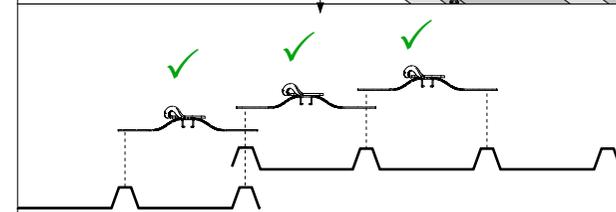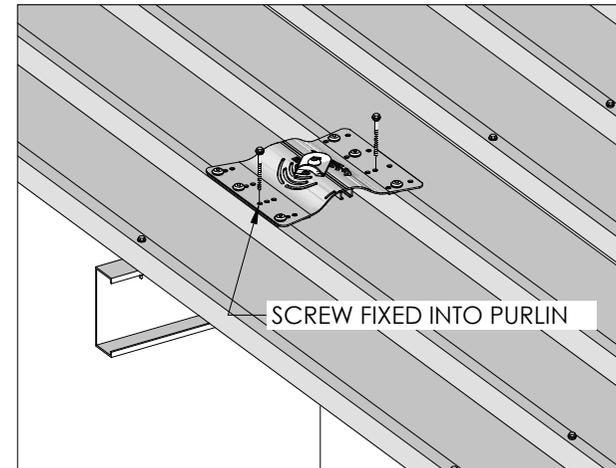

OPTION 2

- 6 x 8mm rivets + 2 x 14g Screws into purlin
- Min 3 purlins

Critical criteria



- The roof deck must be supported by 3 or more purlins.
- Where the anchor cannot be placed over 2 roof sheets, additional fixings may be required.
- The full installation manual must be read, for any questions, contact our team on 1300 301 755



Installation manual
Rapid top mount anchor

Rapid top mount anchor quick install guide - clip-fix roofs



OPTION 1 - RIVETS ONLY

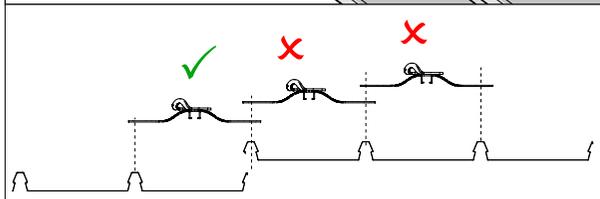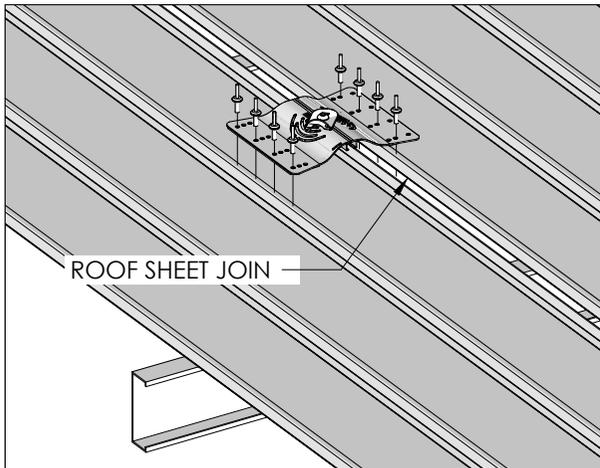

OPTION 1

- 8 x rivets only
- Min 10 purlins (less than 10 purlins - refer to option 2 or 3)
- Must be fixed over 2 roof sheets
- Must be more than 2m from any end of roofsheet



OPTION 2 - RIVETS AND SCREWS

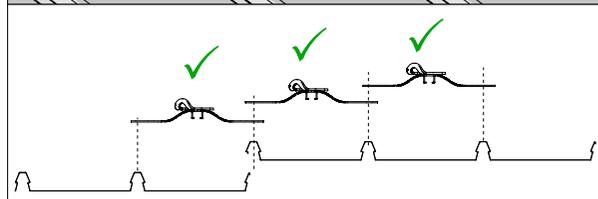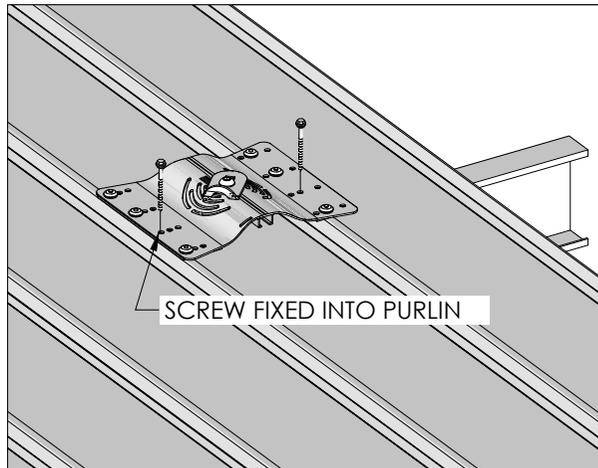

OPTION 2

- 6 x rivets + 2 x 14g Screws into purlin
- Min 3 purlins

OPTION 3 - RIVETS AND SCREWS

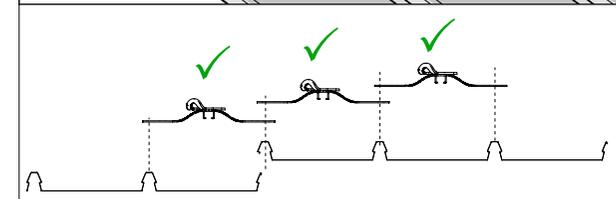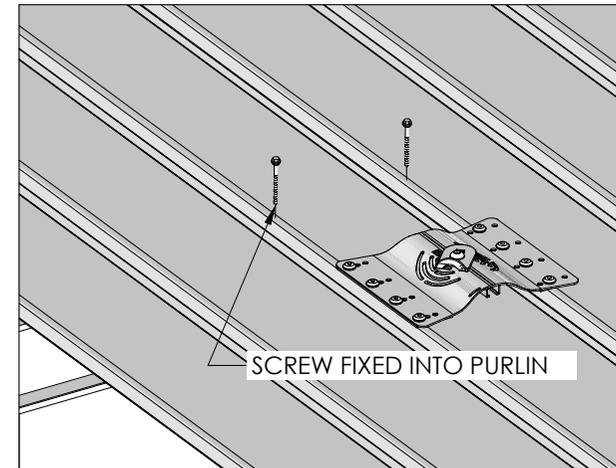

OPTION 3

- 8 x rivets + 2 x 14g Screws into nearest purlin
- Min 3 purlins

Critical criteria

- The roof deck must be supported by 3 or more purlins
- Where the anchor cannot be placed over 2 roof sheets, the anchor fixing must include 2 screws into purlin.
- Clip-fix type roofs with less than 10 purlins will require an additional 2 screws through the roofsheet into the purlin nearest the anchor.
- Clip-fix roofs with 10 or more purlins should be fixed using rivets only (still fixed over 2 roof sheets).
- The full installation manual must be read, for any questions, contact our team on 1300 301 755



Installation manual
Rapid top mount anchor