


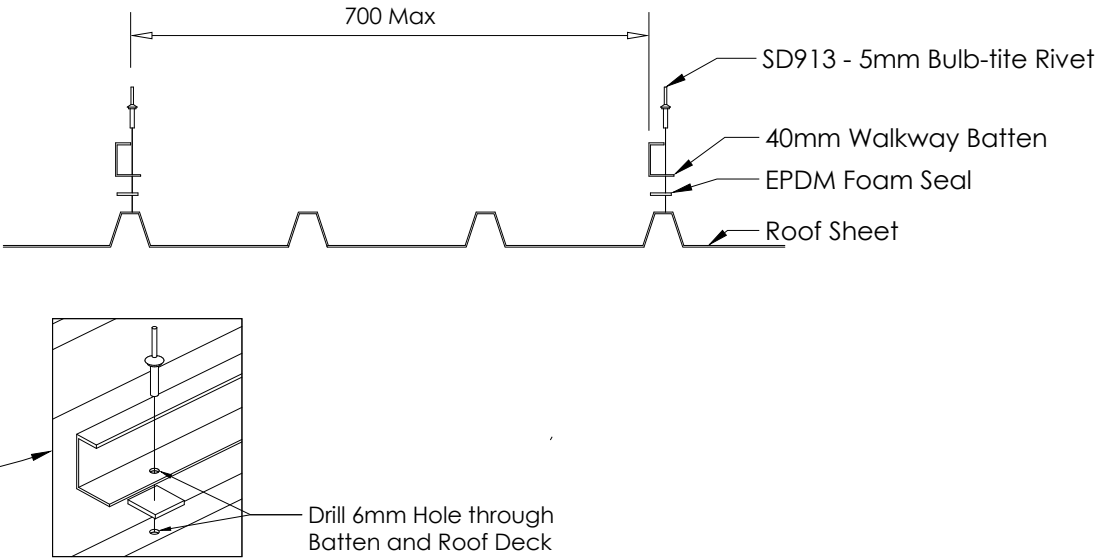
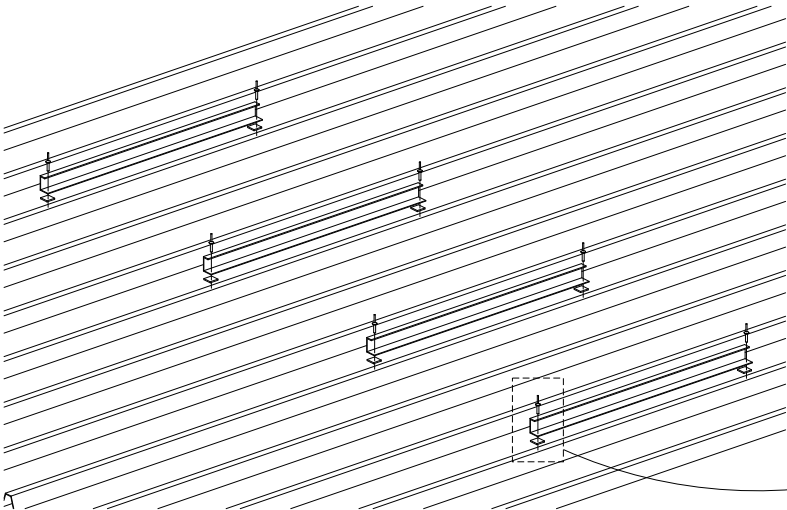
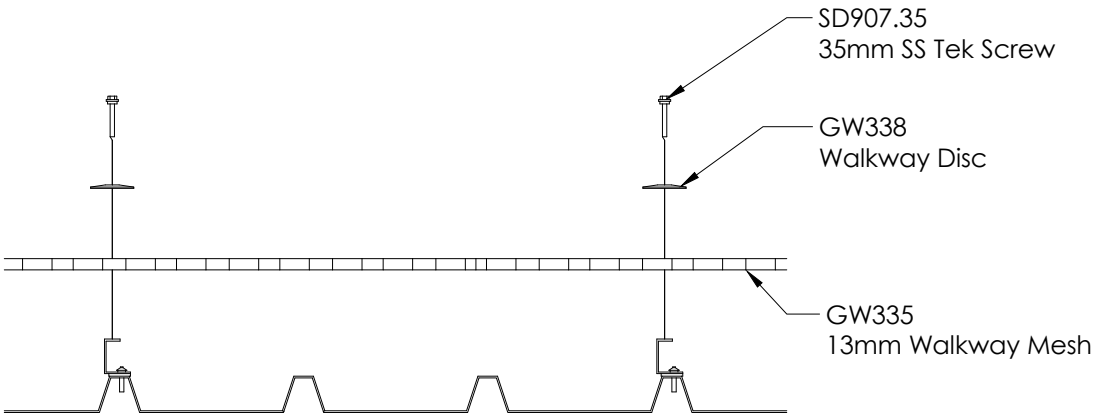
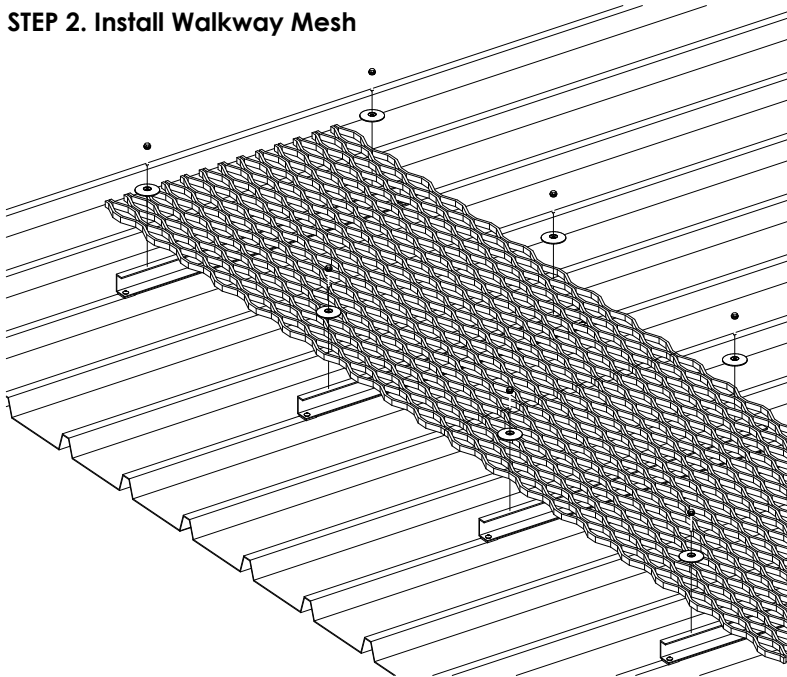
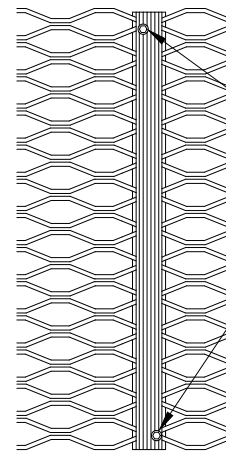


STEP 1. Install Battens

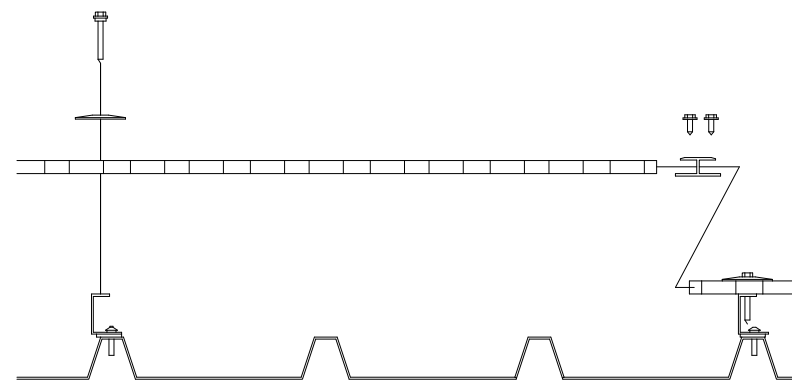


STEP 2. Install Walkway Mesh

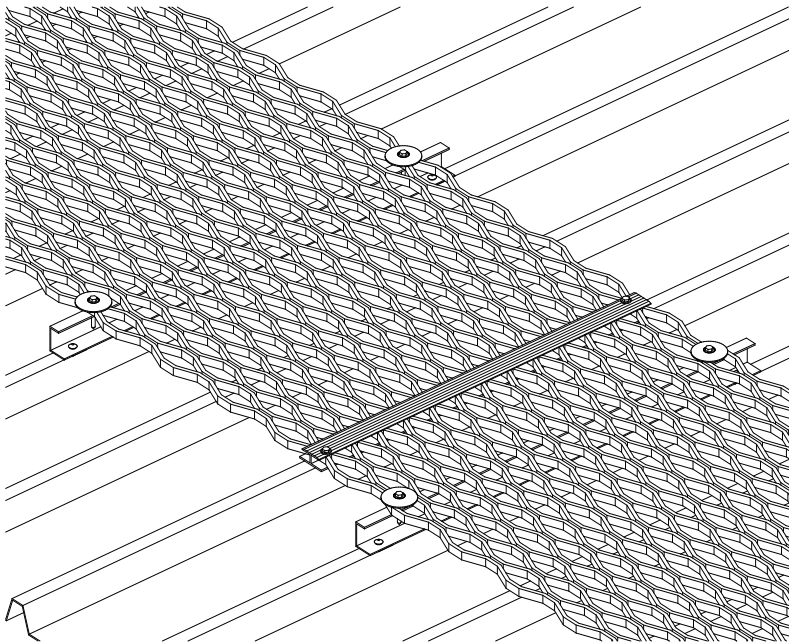

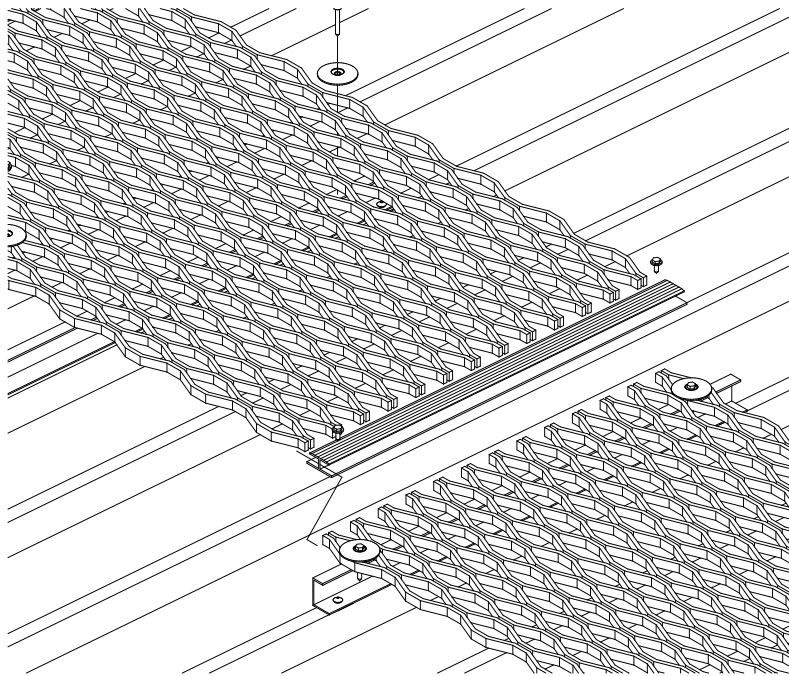


Place screws on opposite sides

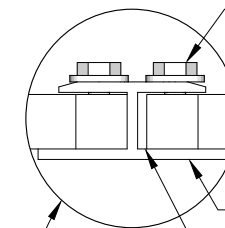

16mm Tek Screw

GW325
Walkway Joiner Bar

3mm Gap

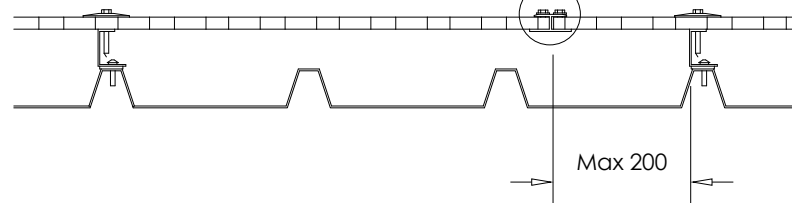

Max 200

Walkway Joiner Bar is to be no more than 200mm from a support